


ESP32-H2-DevKitM-1

[\[中文\]](#)

This user guide will help you get started with ESP32-H2-DevKitM-1 and will also provide more in-depth information.

ESP32-H2-DevKitM-1 is an entry-level development board based on Bluetooth® Low Energy and IEEE 802.15.4 combo module ESP32-H2-MINI-1 or ESP32-H2-MINI-1U.

Most of the I/O pins on the ESP32-H2-MINI-1/1U module are broken out to the pin headers on both sides of this board for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-H2-DevKitM-1 on a breadboard.

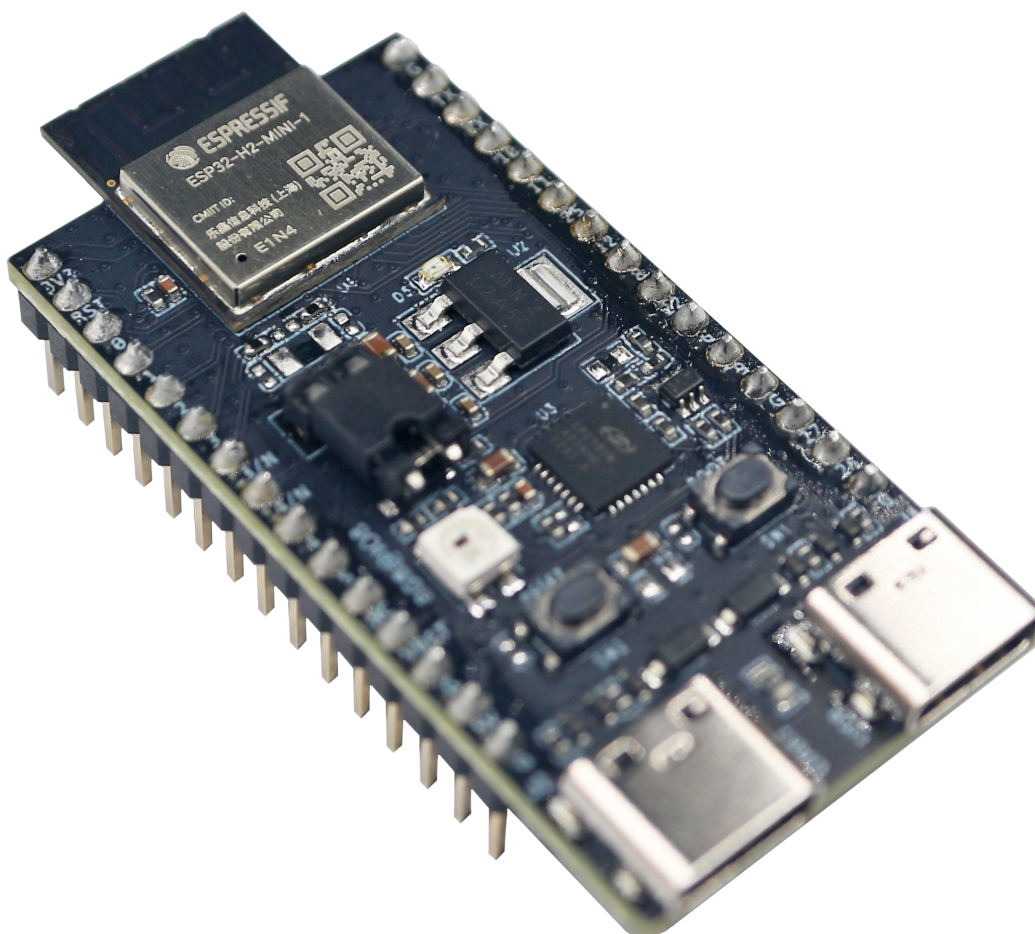

ESP32-H2-DevKitM-1 (with ESP32-H2-MINI-1 on board)


The document consists of the following major sections:

- [Getting Started](#): Overview of ESP32-H2-DevKitM-1 and hardware/software setup instructions to get started.
- [Hardware Reference](#): More detailed information about the ESP32-H2-DevKitM-1's hardware.
- [Hardware Revision Details](#): Revision history, known issues, and links to user guides for previous versions (if any) of ESP32-H2-DevKitM-1.
- [Related Documents](#): Links to related documentation.

Getting Started

This section provides a brief introduction of ESP32-H2-DevKitM-1, instructions on how to do the initial hardware setup and how to flash firmware onto it.

Description of Components

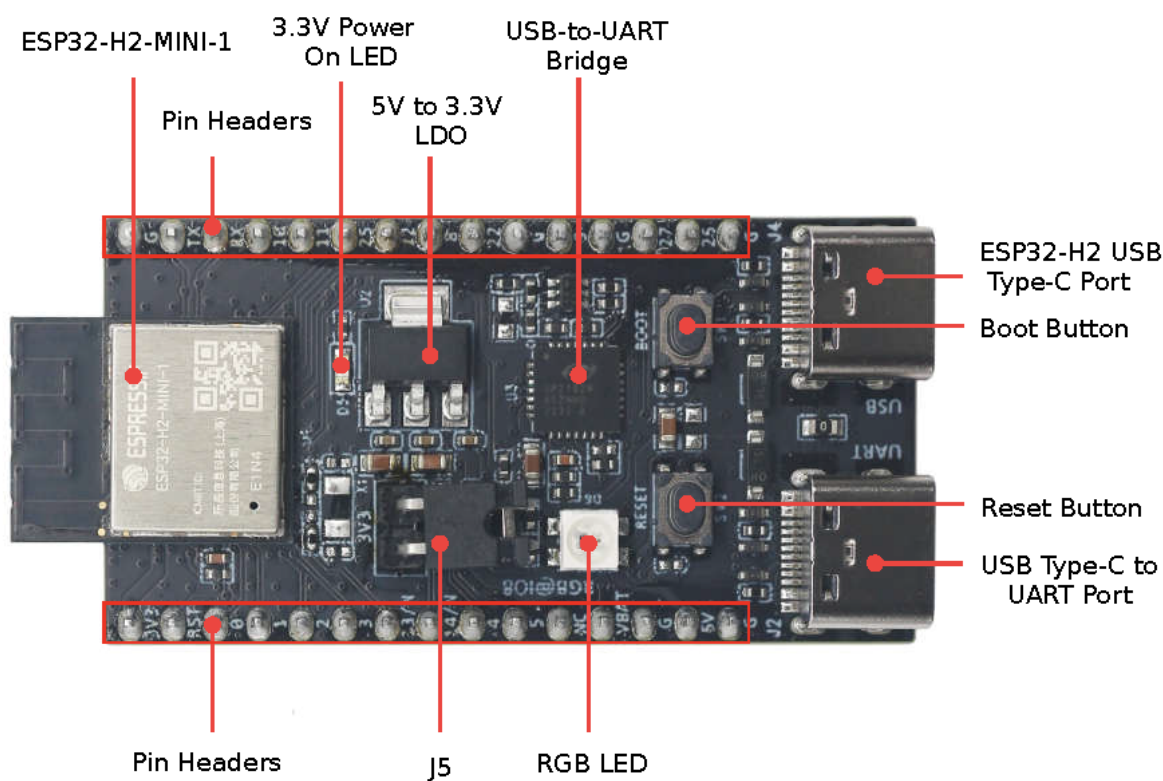

ESP32-H2-DevKitM-1 - Front

The description of components starts from the ESP32-H2-MINI-1/1U module on the left side and then goes clockwise.

| Key Component | Description |
|-------------------------------------|--|
| ESP32-H2-MINI-1 or ESP32-H2-MINI-1U | ESP32-H2-MINI-1/1U, with ESP32-H2 inside which i |
| Pin Headers | All available GPIO pins (except for the SPI bus for flas |
| 3.3 V Power On LED | Turns on when the USB power is connected to the bo |

| Key Component | Description |
|--------------------------|--|
| 5 V to 3.3 V LDO | Power regulator that converts a 5 V supply into a 3.3 V supply. |
| USB-to-UART Bridge | Single USB-UART bridge chip provides transfer rates up to 115,200 baud. |
| ESP32-H2 USB Type-C Port | The USB Type-C port on the ESP32-H2 chip complies with the USB 2.0 specification. |
| Boot Button | Download button. Holding down Boot and then pressing Reset will download the firmware. |
| Reset Button | Press this button to restart the system. |
| USB Type-C to UART Port | Power supply for the board as well as the communication interface. |
| RGB LED | Addressable RGB LED, driven by GPIO8. |
| J5 | Used for current measurement. See details in Section Current Measurement . |

Start Application Development

Before powering up your ESP32-H2-DevKitM-1, please make sure that it is in good condition with no obvious signs of damage.

Required Hardware



- ESP32-H2-DevKitM-1
- USB-A to USB-C (Type C) cable
- Computer running Windows, Linux, or macOS

Note

Some USB cables can only be used for charging, not data transmission and programming. Please choose accordingly.

Software Setup

Please proceed to [Get Started](#), where Section [Installation Step by Step](#) will quickly help you set up the development environment and then flash an application example onto your ESP32-H2-DevKitM-1.

Contents and Packaging

Ordering Information

The development board has a variety of variants to choose from, as shown in the table below.

| Ordering Code | On-board Module | Flash [A] | PSRAM | Antenna |
|-----------------------|-----------------|---------------------------|-------|--------------|
| ESP32-H2-DevKitM-1-N4 | ESP32-H2-MINI-1 | 4 MB | 0 MB | PCB on-board |

| Ordering Code | On-board Module | Flash [A] | PSRAM | Antenna |
|------------------------|------------------|---------------------------|-------|------------------|
| ESP32-H2-DevKitM-1U-N4 | ESP32-H2-MINI-1U | 4 MB | 0 MB | External antenna |

A

◀ The flash is integrated in the chip's package. ▶

Retail Orders

If you order one or several samples, each ESP32-H2-DevKitM-1 comes in an individual package in either antistatic bag or any packaging depending on your retailer.

For retail orders, please go to <https://www.espressif.com/en/company/contact/buy-a-sample>.

Wholesale Orders


If you order in bulk, the boards come in large cardboard boxes.

For wholesale orders, please go to <https://www.espressif.com/en/contact-us/sales-questions>.

Hardware Reference

Block Diagram

The block diagram below shows the components of ESP32-H2-DevKitM-1 and their interconnections.

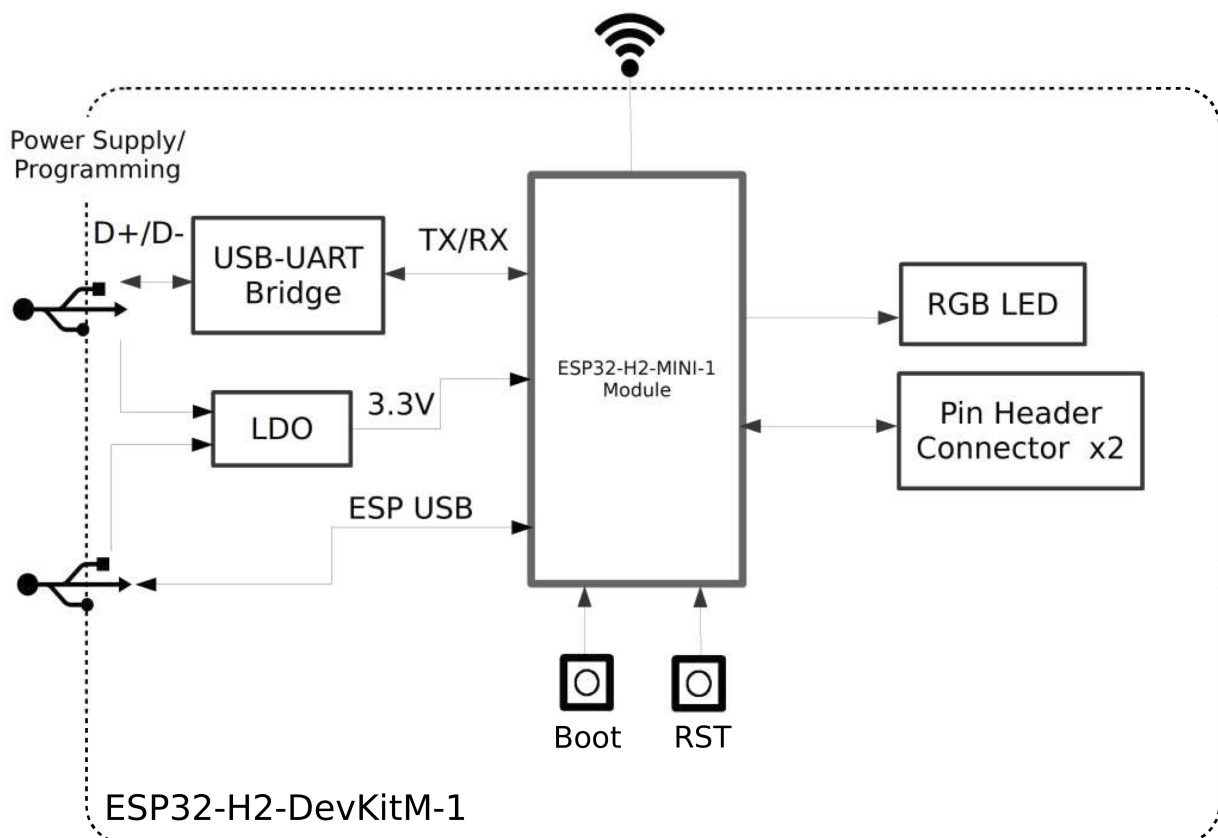

Power Supply Options

There are three mutually exclusive ways to provide power to the board:

- USB Type-C to UART port, default power supply
- 5V and GND pin headers
- 3V3 and GND pin headers

Current Measurement

The J5 headers on ESP32-H2-DevKitM-1 (see J5 in Figure [ESP32-H2-DevKitM-1 - Front](#)) can be used for measuring the current drawn by the ESP32-H2-MINI-1/1U module:

- Remove the jumper: Power supply between the module and peripherals on the board is cut off. To measure the module's current, connect the board with an ammeter via J5 headers.
- Apply the jumper (factory default): Restore the board's normal functionality.

Note

When using 3V3 and GND pin headers to power the board, please remove the J5 jumper, and connect an ammeter in series to the external circuit to measure the module's current.

Header Block

The two tables below provide the **Name** and **Function** of the pin headers on both sides of the board (J1 and J3). The pin header names are shown in [Pin Layout](#). The numbering is the same as in the ESP32-H2-DevKitM-1 Schematic. (see attached PDF).

J1

| No. | Name | Type ¹ | Function |
|-----|------|-------------------|--|
| 1 | 3V3 | P | 3.3 V power supply |
| 2 | RST | I | High: enables the chip; Low: the chip powers off; connected to the int |
| 3 | 0 | I/O/T | GPIO0, FSPIQ |
| 4 | 1 | I/O/T | GPIO1, FSPICS0, ADC1_CH0 |
| 5 | 2 | I/O/T | GPIO2, FSPIWP, ADC1_CH1, MTMS |
| 6 | 3 | I/O/T | GPIO3, FSPIHD, ADC1_CH2, MTDO |
| 7 | 13/N | I/O/T | GPIO13, XTAL_32K_P ² |
| 8 | 14/N | I/O/T | GPIO14, XTAL_32K_N ³ |
| 9 | 4 | I/O/T | GPIO4, FSPICLK, ADC1_CH3, MTCK |

| No. | Name | Type ¹ | Function |
|-----|------|-------------------|-------------------------------|
| 10 | 5 | I/O/T | GPIO5, FSPID, ADC1_CH4, MTDI |
| 11 | NC | – | NC |
| 12 | VBAT | P | 3.3 V power supply or battery |
| 13 | G | P | Ground |
| 14 | 5V | P | 5 V power supply |
| 15 | G | P | Ground |

J3

| No. | Name | Type ¹ | Function |
|-----|------|-------------------|--------------------------|
| 1 | G | P | Ground |
| 2 | TX | I/O/T | GPIO24, FSPICS2, U0TXD |
| 3 | RX | I/O/T | GPIO23, FSPICS1, U0RXD |
| 4 | 10 | I/O/T | GPIO10, ZCD0 |
| 5 | 11 | I/O/T | GPIO11, ZCD1 |
| 6 | 25 | I/O/T | GPIO25, FSPICS3 |
| 7 | 12 | I/O/T | GPIO12 |
| 8 | 8 | I/O/T | GPIO8 ⁴ , LOG |
| 9 | 22 | I/O/T | GPIO22 |
| 10 | G | P | Ground |
| 11 | 9 | I/O/T | GPIO9, BOOT |
| 12 | G | P | Ground |
| 13 | 27 | I/O/T | GPIO27, FSPICS5, USB_D+ |
| 14 | 26 | I/O/T | GPIO26, FSPICS4, USB_D- |
| 15 | G | P | Ground |

[1] (1,2): P: Power supply; I: Input; O: Output; T: High impedance.

[2] : When connected to XTAL_32K_P inside the module, this pin cannot be used for other purpose.


[3] : When connected to XTAL_32K_N inside the module, this pin cannot be used for other purpose.

[4] : Used for driving RGB LED inside the module.

For more information about pin description, please see [ESP32-H2 Datasheet](#).

Pin Layout

ESP32-H2-DevKitM-1

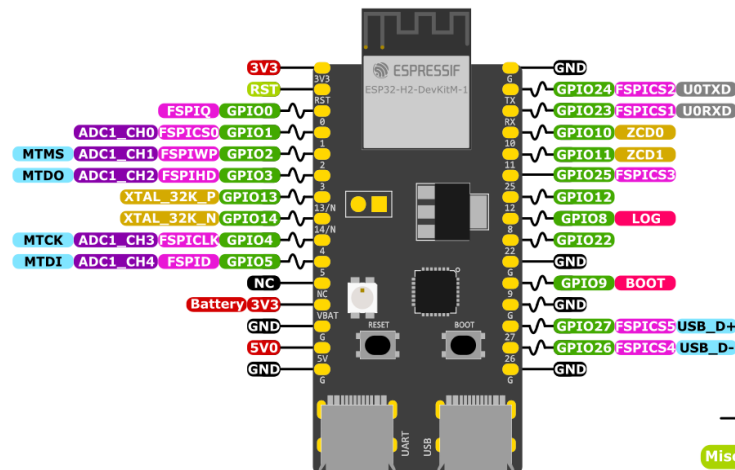

ESP32-H2 Specs

32-bit RISC-V single-core @96MHz
IEEE 802.15.4 supporting Thread and Zigbee
Bluetooth® Low Energy supporting Bluetooth 5 and Bluetooth mesh
320 KB SRAM, 128 KB ROM, 4 KB LP Memory, 2/4 MB Flash
19 GPIOs, 3x SPI, 2x UART, 2x I2C, 1x I2S, RMT, LEDPWM, MCPWM, PCNT, TWAI, USB Serial/JTAG, GDMA, ETM, PARLIO, SAR ADC, Temp Sensor, Timers

ESP32-H2-DevKitM-1 Pin Layout

Hardware Revision Details

No previous versions available.

Related Documents

- [ESP32-H2 Datasheet \(PDF\)](#)
- [ESP32-H2-MINI-1/1U Datasheet \(PDF\)](#)
- [ESP32-H2-DevKitM-1 Schematics \(PDF\)](#)
- [ESP32-H2-DevKitM-1 PCB Layout \(PDF\)](#)
- [ESP32-H2-DevKitM-1 Dimensions \(PDF\)](#)
- [ESP32-H2-DevKitM-1 Dimensions source file \(DXF\)](#)

For further design documentation for the board, please contact us at sales@espressif.com.

[Provide feedback about this document](#)